

DigiTel Standard Touch-tone Function Definition

	1 PAUSE	2 RECORD	3 PLAY	
44 JUMP TO BEGINNING	4 REWIND	5 VOLUME UP	6 F.FORWARD	66 JUMP TO END POINT
	7	8 VOLUME DOWN	9 PRIORITY	
	* HANGUP	0 HELP	# SEND	

The chart above shows the default touch-tone function definitions.

Each user can be assigned their own unique touch-tone function definition. A touch-tone function definition can match one that a user is already comfortable with, or one that works with their favorite dictate station.