


---

# Dictaphone

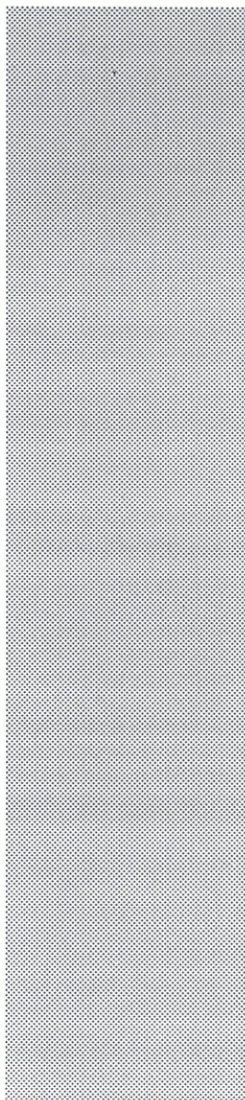

**CONNEXIONS<sup>®</sup>**  
**System Telephone**  
**LITE SET<sup>®</sup> HEADSET/MICROPHONE**

**Operating Instructions**

---

## LITE SET<sup>®</sup> HEADSET/MICROPHONE (PN869924)

The LITE SET<sup>®</sup> headset/microphone has an under-the-chin design for convenient hands free telephone conversations. It allows you to choose the listening configuration you want: either monaural (1 ear) or binaural (2 ears). A Quick Disconnect coupler gives you unrestricted movement when you need it, and a selection of snap-on eartips are provided for your listening comfort. There is also a mute switch (on/off) located on the microphone.

Despite the fact that the headset/microphone is enabled by selecting the speakerphone function, it performs just like the telephone handset. It lets you talk and listen without any of the audio clipping normally associated with speakerphone operation.

### INSTALLATION

---

The headset/microphone must be installed by a qualified service person. (The CONNEXIONS<sup>®</sup> telephone requires some disassembly.)

**Note:** Installing the headset/microphone permanently disables the headset jack and speaker microphone of the CONNEXIONS telephone.

### CONFIGURING THE LITE SET<sup>®</sup> HEADSET/MICROPHONE

- EARTIPS -- Swap eartips by grasping plastic (not foam) and snapping them either on or off.
- CLOTHING CLIP -- Attach strap to cord, and affix clip to clothing.
- MONAURAL (1 EAR) - Remove the under-the-chin tube from both earpieces. Insert the small acoustic plug into the earpiece tube hole (microphone earpiece side). Connect the earhook to one end of the tube and the earpiece (microphone earpiece side) to the other end of the tube.
- BINAURAL (2 EARS) - Connect an earpiece to each end of the under-the-chin tube.

- **HEADSET SIZE** -- Firmly grasp the center of the under-the-chin tube with both hands. Warm the tube by sliding your hands back and forth. After the tube is warm, adjust its size and hold it in that position for 60 seconds.

## OPERATIONS

---

### PROGRAMMING THE CONNEXIONS<sup>®</sup> TELEPHONE

#### Feature Code

- Program the feature code for Headset Answer (shown here) into one of the programmable keys. Refer to Section 4, Quick Access Program Keys, of the CONNEXIONS System Telephone Operating Instructions for additional information.
- Press the **[# \* 11]** key to enable the headset/microphone. Its associated LED lights.

### DIALING A TELEPHONE NUMBER

While wearing the headset/microphone --

- Verify that the LED for the **[# \* 11]** key is on.
- Press the **[Speaker/Mute]** key , and dial the telephone number. You will hear all of the call progress tones through the headset.
- After the call is connected, talk into the microphone on the headset.
- Press **[Stop]** to hangup.

**Note:** If you lift the handset during a call, the microphone turns off, and the handset transmitter turns on. Audio plays through both the headset and the handset.

### ANSWERING A CALL

While wearing the headset/microphone --

- Verify that the LED for the **[# \* 11]** key is on.
- Press the **[Speaker/Mute]** key to answer the call.

### MUTING THE MICROPHONE

During a call you can prevent a caller from hearing your surrounding conversations by muting the microphone. You can use either the **microphone's on/off switch** or the CONNEXIONS telephone [speaker/mute] key

to mute the microphone; however, to avoid confusion, use either one or the other, not both.

## QUICK DISCONNECT


At the junction of the coiled cord and the straight cord of the headset/microphone is a quick disconnect coupler. To undo this coupler, simply pull it apart. Once the coupler is undone, you can move about freely without removing the headset.

## LITE SET<sup>®</sup> HEADSET/MICROPHONE COMPONENTS

---

- |                                   |                            |
|-----------------------------------|----------------------------|
| A - Under-the-chin tube           | E - Foam dome eartips      |
| B - Clothing Clip                 | F - White mushroom eartips |
| C - Earhook                       | G - White conical eartips  |
| D - Soundpiece<br>(holds eartips) | H - White dome eartips     |
| * - Optional 10' extension cable  | I - Acoustic plug          |

\* Not shown

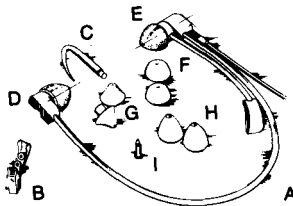

### FCC Requirements - Part 68

The device has received an FCC type XA registration: it is designed to be used with any FCC registered telephone equipment that has a mating connector for the headset plug. The XA registration number is BCE9GT69688-XA-N.

DICTAPHONE<sup>®</sup>, CONNEXIONS<sup>®</sup> and LITE SET<sup>®</sup> are registered trademarks of Dictaphone Corporation, Stratford, CT.

© 1989 Dictaphone Corporation  
Printed in U.S.A. 1M

8/1

L-1046